


Existing Masonary Wall

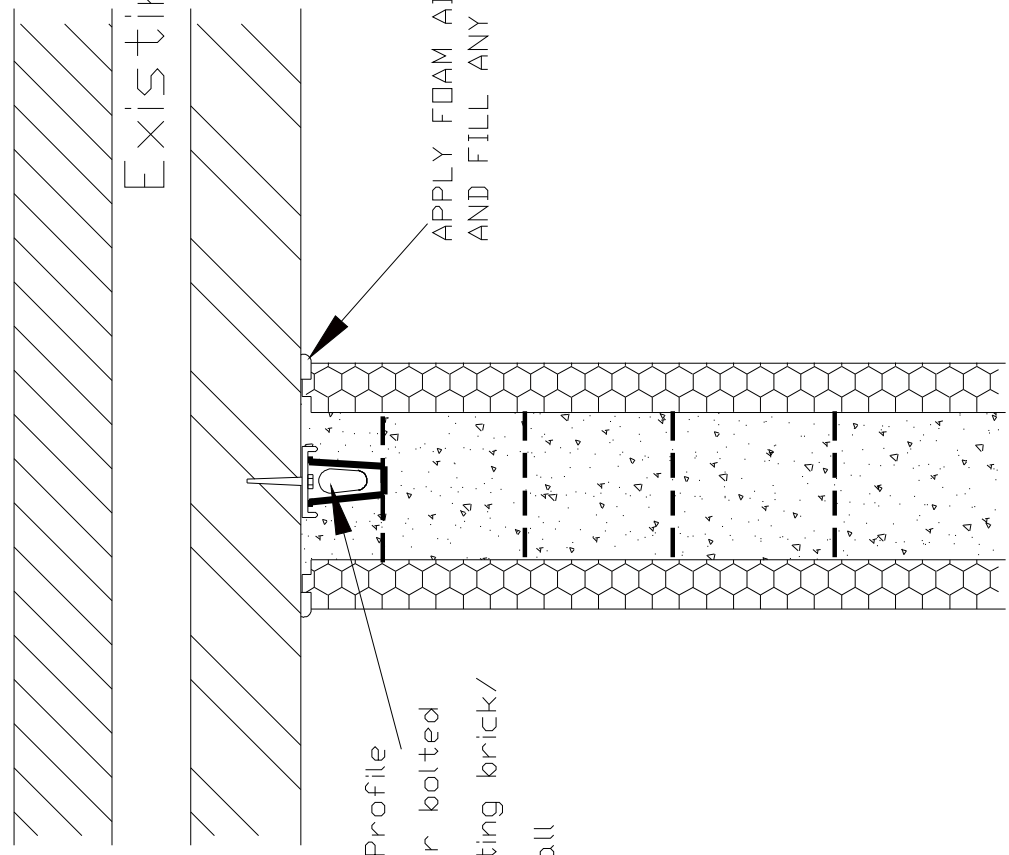

Fir Fix Profile
or similar bolted
to existing brick/
block wall

APPLY FOAM ADHESIVE TO JOINT
AND FILL ANY VOIDS.